

microSD Card Replacement Instructions.

1. Unplug the SAMi Camera.
2. Pop the microSD card out of the slot on the camera by pushing on it. You can discard this unless we've asked you to return it. You may want to cut it in half before putting it in the trash to prevent any possibility of recordings being recovered from it.
3. Remove the new microSD card from its packaging (it may be in the SD card adapter).
4. Install the card in the camera. The gold fingers are inserted first. On the SAMi-3 the card is oriented with the gold fingers facing the rear of the camera, printing to the front. On the older SAMi camera with QR code this is reversed, the gold fingers face the front.
5. Push the card in until it clicks. The card should not be loose and only a small part should be visible.
6. Restore power, the camera is now ready for use.
7. You can use the included SD card adapter to copy recordings to your computer.

